


Emitter Instruction for RE201, RE202, RE203 series

1.Product Appearance

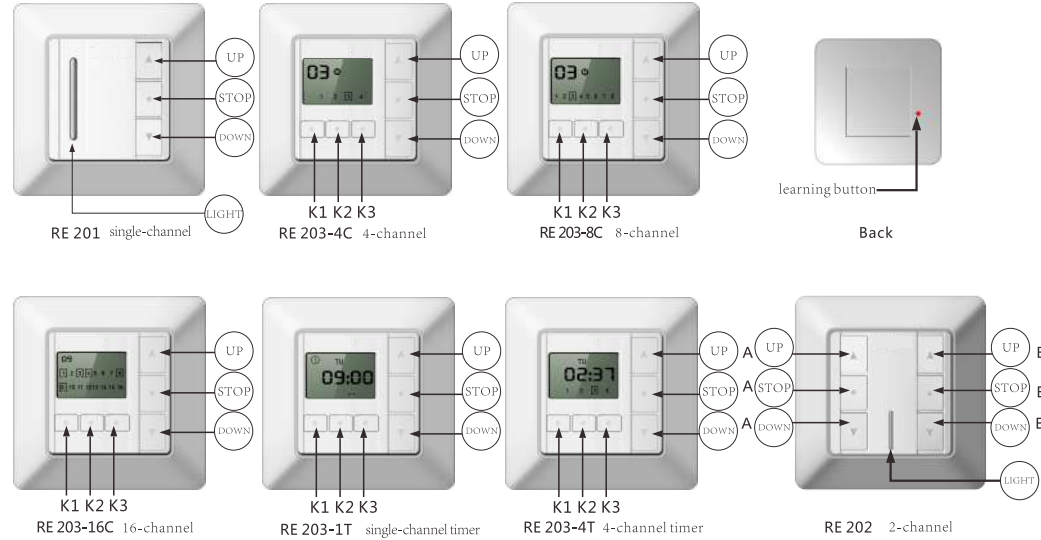

2. Technique Data

- Power: 3V Model: CR2032
- Working Temperature: -10 C to +60 C (LCD)
- Working Temperature: -20 C to +60 C (Non- LCD)
- Working Current: $\leq 12\text{mA}$
- Code: Rolling Code
- Frequency: 433.92MHz


1.wall mount
2.panel

3. Code Learning Note: Please do not perform code learning in group control mode


01. Single Channel

Press Up and Down buttons simultaneously once, then short press Stop button once.

02. LCD multi-channel (take 8-channel emitter as an example)

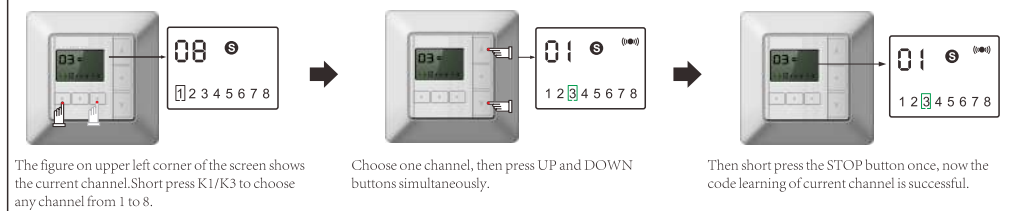


03. LCD Multi-Channel (take 8-channel emitter as an example)

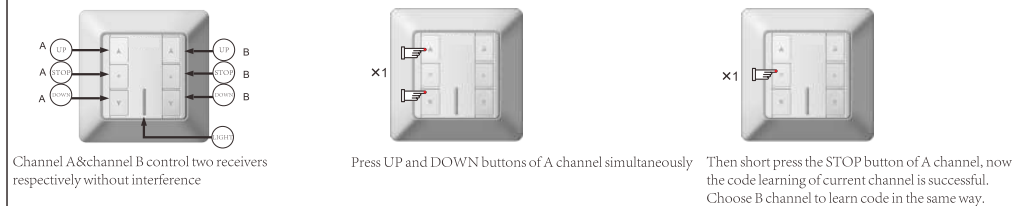


4. Single Control

Select a channel by press K1/K3 as the current channel, then you can control this channel by pressing UP/STOP/DOWN button.

5. Group Control (LCD) Short press K2 to choose Group Control **M** or Single Control **S**.

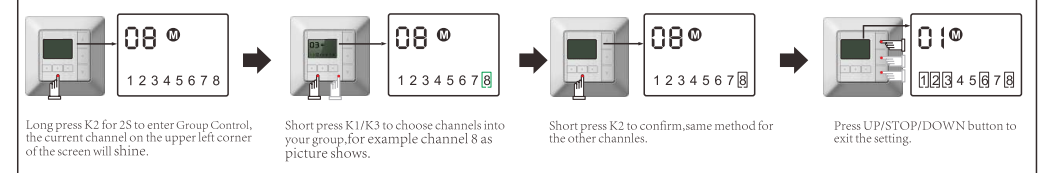


6. Delete Group Control

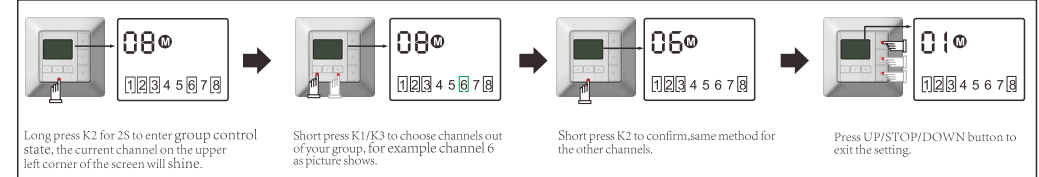

Note: Whether in **M** or **S** mode, the current channel is always selected


7. LCD timer emitter (4-channel)

01. Time Setting

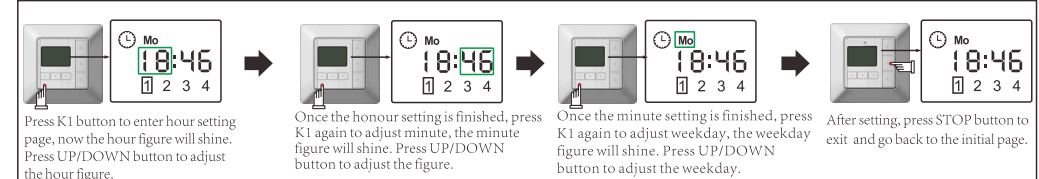


02. Timing Setting (set different time points to make the motor to close or open)

In the initial page, press K2 to enter timing setting page, there is a timing clock on the upper left corner. You can respectively set 8 opening time and 8 closing time, in total 16 points. Press K2 to cycle among 16 time points. Press K3 to choose the output channels which you want (single channel or 4 channels)

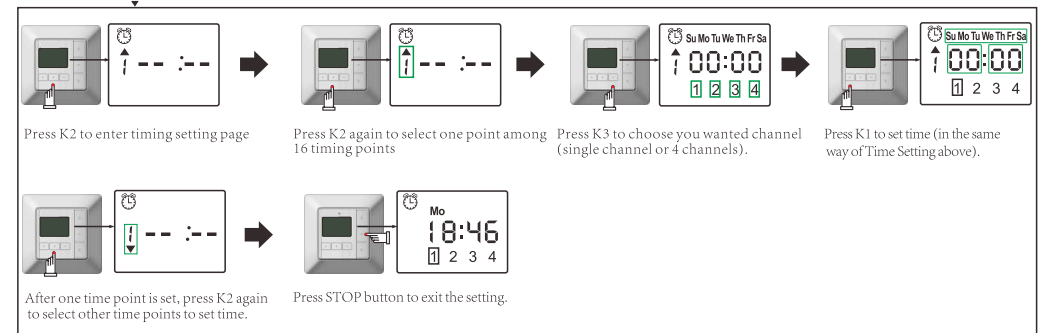


03. Close Timing Function

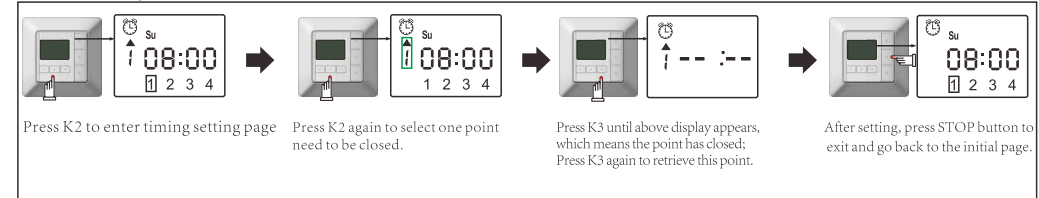

Emitter Instruction for RE201, RE202, RE203 series


8.LCD timer emitter(1-channel)

01.Time Setting

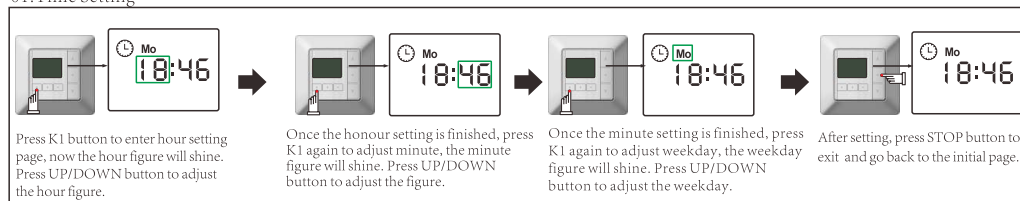


02.Timing Setting


In the initial page, press K2 enter timing setting page, there is a timing clock ⌚ on the upper left corner, You can respectively set 8 opening time and 8 closing time , in total 16 points ↑~⌚ Press K2 to cycle among 16 time points.

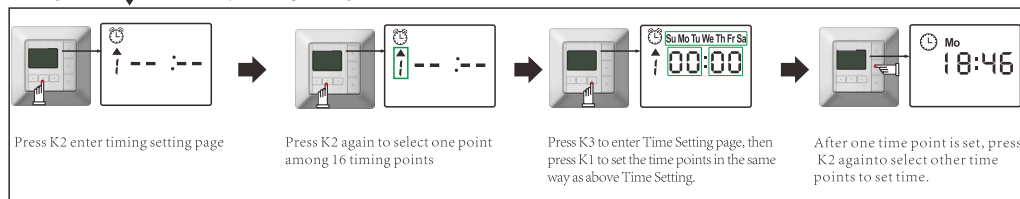

03.Close Timing Function

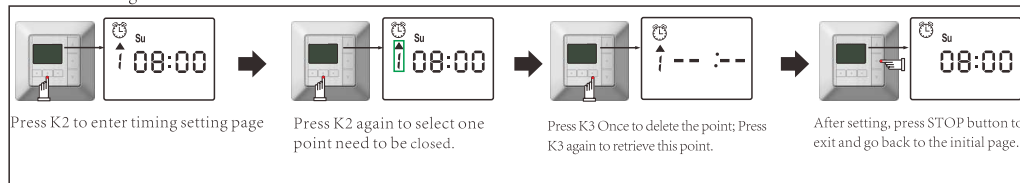

04.Stop Watch Function

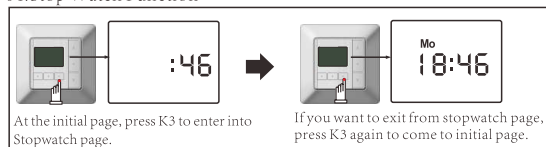

⚠ Note:

- You need enter timing setting page if you want set timing points. There should be a timing clock on the upper left corner, otherwise, the adjustment is invalid. If there is no clock on the screen, please hold Stop button and press K2 within 10 seconds, there will be a clock on the upper left corner.
- It is better not to press the emitter's buttons too long so as to prolong the battery life. The button press should be about 0.5s with 1s interval.
- The emitter would stop working if the battery is in low power. Please change new battery for the emitter