


7系列说明书-英(2折页)

尺寸 : 120*48mm

RE701V-703V Instruction

⑦ Speed Adjustment

Dial the switch on right side, you can complete the 3 gear speed adjustment.




⚠ Attention

- Group control settings, the channel should be increased or decreased within the checking channel time(3-4 seconds). When long press to toggle to a single channel, in the sleep state and view the channel status can be operate.
- The emitter button press time should not be too long to improve battery life, the normal interval press time should be 1-2 seconds.
- Emitter does not work when the battery power is to low. In this case, the battery needs to be replaced.

RE701V-703V Instruction

11.03.03.SMS-RE701V/703VYT-V1

① Appearance

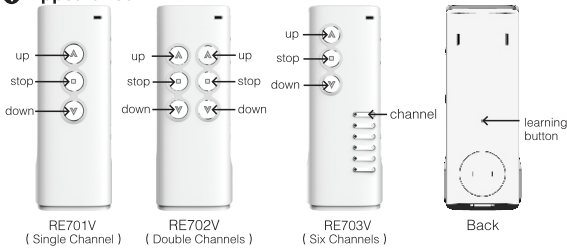

up → A ← up stop → D ← stop down → Y ← down

up → A ← up stop → D ← stop down → Y ← down

up → A ← up stop → D ← stop down → Y ← down

channel ← learning button

RE701V (Single Channel) RE702V (Double Channels) RE703V (Six Channels) Back

② Technique Specifications


- Power: 3V Battery Model: CR2032
- Working Temperature: -20°C~+60°C
- Currency: ≤ 16mA
- Code: Rolling Code
- Transmission Frequency: 433.92MHz

RE701V-703V Instruction


③ Code Learning

Choose one channel, then press UP and DOWN buttons simultaneously once.

Then short press the Stop button, now the code learning of the selected channel is successful. another channel in the same way.



④ Group Control



- Quick press (one second) the channels that you want to control one by one to choose channels.
- Press UP, STOP, DOWN to control the channels that you have chose.
- If you only want to control one channel, Long press that channel button.


Note:
 a. Light on indicates that you have chose the channels successfully.
 b. Please press the channels quickly, otherwise it will go to asleep mode (light off as a sign).

RE701V-703V Instruction

11.03.03.SMS-RE701V/703VYT-V1

⑤ Power Display

When the battery level is too low, the power indicator light on the upper right corner will turn red. In this case, the battery needs to be replaced.



⑥ Angle Adjustment

Clockwise or counterclockwise to scroll the wheel in the right side, the angle can be adjusted.

